



MINI-SLIDER

1/18TH SCALE READY-TO-RUN MINI SPRINT CAR

Operation Manual

Thank you for choosing the Mini-Slider™ from Losi®. This guide contains the basic instructions for operating your new Mini-Slider. While the Mini-Slider is great for first-time R/C drivers, it does require some mechanical experience and/or parental supervision for drivers under 12. It is critical that you read all of the instructions in order to operate your model correctly and avoid unnecessary damage. Please take a moment to look over all the printed materials before operating your new Mini-Slider.



2007 Losi, A Division of Horizon Hobby Inc.


Safety Precautions

This is a sophisticated radio controlled model that must be operated with caution and common sense. Failure to operate your Mini-Slider in a safe and responsible manner could result in damage to the model and property. The Mini-Slider is not intended for use by children without direct adult supervision. Losi and Horizon Hobby shall not be liable for any loss or damages, whether direct, indirect, special, incidental, or consequential, arising from the use, misuse, or abuse of this product or any product required to operate it.

- This model is controlled by a radio signal subject to interference from many sources outside your control. This interference may cause momentary loss of control so it is advisable to always keep some distance in all directions around your model as a safety margin to avoid collisions.
- Always operate your model in an open area away from cars, traffic and people.
- Avoid running your model in the street where damage can occur.
- Never run your Mini-Slider with low transmitter batteries.
- Carefully follow the directions and warnings for this and any optional support equipment.
- Keep all chemicals, small parts and anything electrical out of the reach of children.

Tools and Items You Will Find Handy

- Soft bristle brush for cleaning
- 5.5mm nut driver for the wheel nuts.
- #0 or #1 Phillips screwdriver
- LOSA99100 .050" Allen Wrench

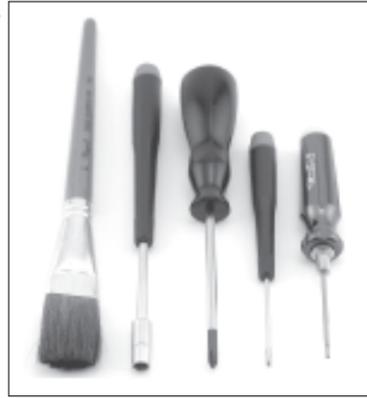

Note: Use only Losi tools or other high quality tools. Use of inexpensive tools can cause damage to the small screws and parts used on this type of model.

The Radio System


The following is an overview of the various functions and adjustments found on the Mini-Slider radio system. Since the Mini-Slider operates on a radio signal you control, it is important for you to read and understand about all of these functions and adjustments before driving.

The Receiver

1. **Throttle Port:** Where the Electronic Speed Control (ESC) plugs in.
2. **Steering Port:** Where the steering servo(s) plug in.
3. **Bind Port:** Used to "bind" the receiver to the transmitter.
4. **Indicator Light:** Shows that a frequency/channel is being received.


The Electronic Speed Controller (ESC)

5. **On/Off Switch:** Powers the receiver and ESC.
6. **Setup Button and Indicator Light:** Used for re-setting the ESC.
7. **Battery Lead:** Connects to the battery pack for power.
8. **Motor Lead:** Connects to the wire leads from the motor.

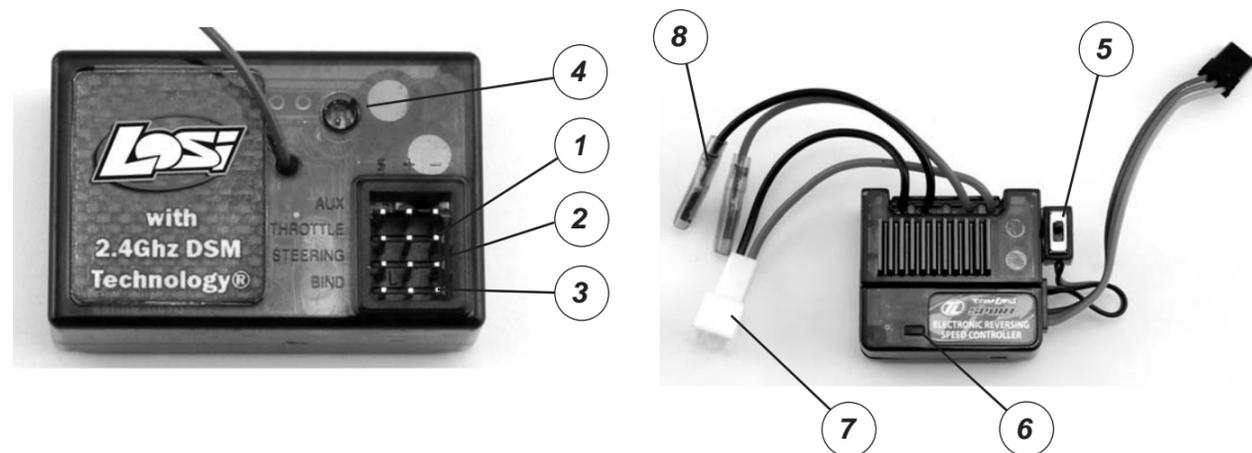

The Transmitter

1. **Steering Wheel:** Controls direction (left/right) of the model.
2. **Throttle Trigger:** Controls speed and direction (forward/reverse) of the model.
3. **Antenna:** Transmits signal to the model.
4. **On/Off Switch:** Turns the power on for the transmitter operation.
5. **Indicator Lights:** Green (top) light indicates adequate battery power. Red (bottom) light indicates signal strength.
6. **Steering Trim (ST. TRIM):** Adjusts the "hands off" direction of the model.
7. **Throttle Trim (TH. TRIM):** Adjusts the motor speed to stop at neutral.
8. **Steering Rate:** Adjusts amount front wheels move when the steering wheel is turned left or right.
9. **Steering Reverse Switch (ST. REV):** Reverses the function of the steering when the wheel is turned left or right.
10. **Throttle Reverse Switch (TH. REV):** Reverses the function of the speed control when pulled back or pushed forward.
11. **Bottom Cover:** Covers and holds the batteries powering the transmitter.

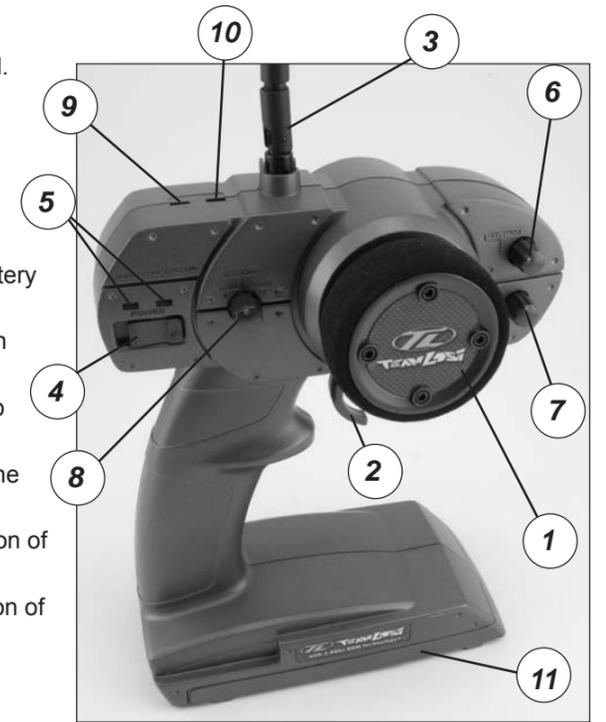

Re-Binding the Transmitter to the Receiver

The Losi DSM radio system included in the Mini-Slider operates on 2.4 GHz, and provides 79 different channels which are automatically selected when the transmitter and vehicle are turned on. The communication between the transmitter and receiver starts in the few seconds after the transmitter and vehicle are both turned on. This is called the "binding process". The Losi DSM radio system will not interfere with previous technology radio systems that operate on 27 MHz or 75 MHz frequencies and you will not receive any interference from them.

Although set at the factory, below are the steps required to re-bind your transmitter to the receiver should the need arise. During the bind process there is a unique ID from the transmitter communicated to the receiver to ensure trouble free radio operation.

Steps to Re-Bind

1. Ensure that the transmitter and vehicle are both turned off.
2. Using the supplied Bind plug (which looks like a standard receiver plug with a wire loop installed) insert or plug into the receiver slot labeled "BIND". Looking down on the receiver this slot would be below the LED and is the furthest from the LED, or nearest to the corner of the receiver. 
Note: you do not need to remove any of the other plugs to re-bind.
3. With the Bind plug installed, turn on the vehicle. Notice a blinking Orange LED within the receiver 
4. Now you are ready to turn on the transmitter. You should notice on the back of the transmitter a similar blinking Orange LED under the translucent cover.
5. Both the receiver and transmitter blinking Orange LED will stop blinking and become solid indicating they have "bound" themselves together.
6. Please turn off both the vehicle and transmitter to remove the Bind plug from the receiver. Failing to remove the Bind plug will cause the transmitter to attempt to rebind every time you turn on the vehicle and transmitter.
7. Turn on both the vehicle and transmitter to ensure operation. If the transmitter does not control the vehicle, please repeat steps 1 to 6. Should this not correct the problem please call Horizon Service/Repair for further assistance.
8. The Bind process is complete. Your vehicle's radio system should be ready for use.

Resetting the ESC

The ESC comes from the factory pre-set and ready for use. If for some reason you should need to re-set the ESC, use the following instructions.

1. Turn on the transmitter and ESC. Press the set-up button — both the RED and GREEN LEDs will come on.
2. Pull the throttle trigger all the way back (full speed) and press the set-up button once — only the GREEN LED will come on.
3. Push the throttle trigger full forward (brake/reverse) and push the set-up button once — only the RED LED will come on.
4. Let the throttle trigger return to the neutral (center) position and press the set-up button once more to save the program and exit set-up mode — only the GREEN LED will be on.

Notes:


- A: If the receiver does not receive a signal from the Transmitter, the ESC will not enter the Program mode.
- B: While in Program mode, the motor will not run.
- C: If the set-up button is not pressed for 20 seconds while in the Program mode, the ESC will exit the Program mode and the data will be saved.

Chassis Tuning

The Mini-Slider has several adjustments available to you for tuning the performance for your needs. Although there are multiple shock positions and camber link locations provided, we have built the model with the best overall settings. The following are simple adjustments and easily maintained settings to assure proper operation and performance. It is advised when making any adjustment that you do so in small increments and always check for other parts of the chassis that are affected.


Slipper Adjustments

The Mini-Slider is equipped with a slipper device offering both traction control and protection for the transmission. The slipper is primarily used to help absorb sudden impacts on the drivetrain due to landing big jumps or when using more powerful aftermarket motors and/or battery packs. Additionally, it can be used to smooth out the flow of power to the rear wheels and limit wheel spin when running on extremely slick surfaces. Adjustment is made by turning the 3mm adjustment nut clockwise (to the right) to reduce the slip, or counterclockwise (to the left) to increase the slip. When adjusted properly, you should be able to hold the rear tires firmly and barely be able to push the spur gear forward with your thumb. To track test, turn the Mini-Slider on and place it on the ground. As you push it backwards allowing it to roll freely, punch the throttle. The slipper should slip no more than an inch or two as it accelerates. With the included motor and battery pack it should slip just a little. Make sure you replace the gear cover before running.

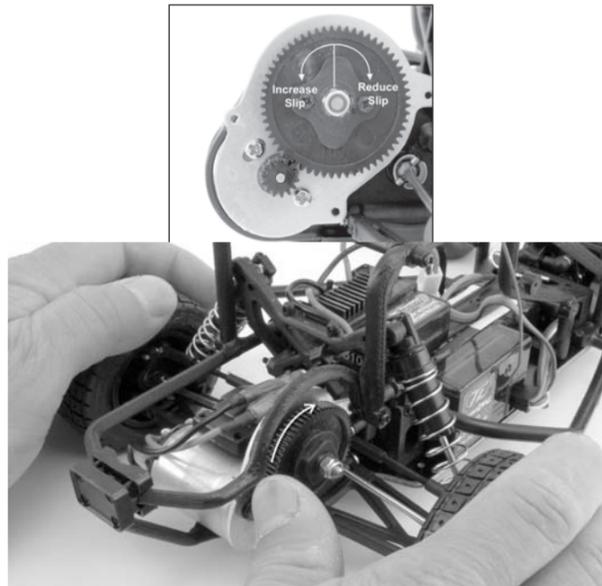


Steering Rate

Your transmitter is equipped with a steering rate control to the left of the steering wheel. This advanced feature, usually found only on competition-type radios, allows you to adjust the amount the front tires move when you turn the steering wheel. This is really helpful when you are on slick, as well as high traction, surfaces. If your Mini-Slider turns too sharply and/or spins out easily, try turning the steering rate down by rotating the knob counterclockwise (to the left). For sharper or additional steering, try turning the knob clockwise (to the right).

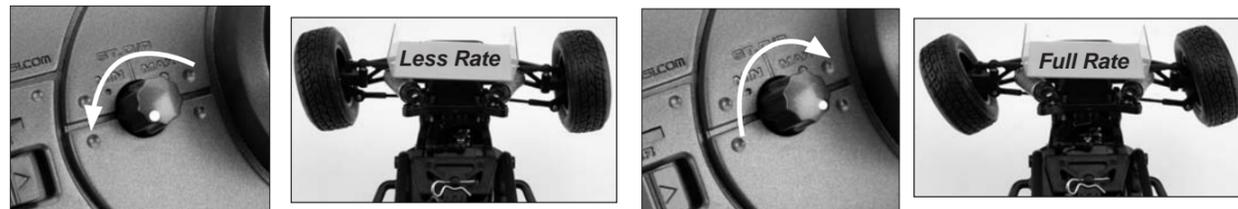


Camber

Camber is the angle of the tires to the racing surface when viewed from the front or rear of the truck. You want to keep both the front and rear tires straight up and down or leaning in at the top very slightly. If you are running on carpet or similar high traction surfaces, you may find leaning the tires in a bit more helps. This adjustment is made with the threaded links extending from the front or rear bulkhead to the spindle carrier or rear hub. Making the camber rods shorter increases the camber and lean-in of the tire, while making the camber rods longer decreases the camber.

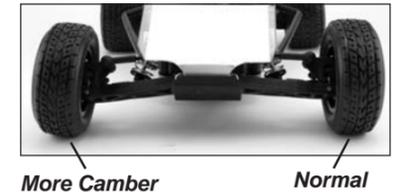

Toe-In

This is the relationship of the left and right side tire to one another. Ideally you want the front of the tires to be pointed inward toward each other just slightly when viewed from above. This makes the model track straight and stable. This is controlled with the threaded steering rods on either side. As you make them longer you will increase the toe-in and vice versa.

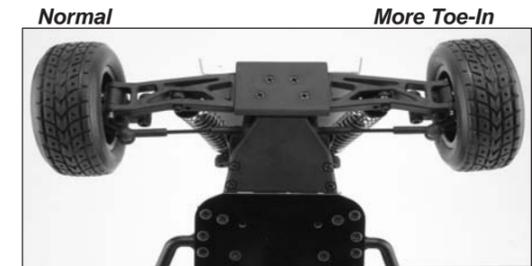

Ride Height

This is the height the chassis sits and runs at. Spring spacers included with the Mini-Slider, when installed between the shock top and spring, will increase the pre-load on the spring and raise the chassis. You may want to try this when running on extremely rough surfaces.

Service/Repair

Radio/Speed Control & Motor

If you have any problems other than those covered in the troubleshooting section, please call the electronics service department at (877) 504-0233. They will be able to give your specific problem additional attention and instruct you as to what needs to be done.

Chassis

If you have any questions other than those covered in the troubleshooting or maintenance sections, please call (877) 504-0233.

Cleaning


Performance can be hindered if dirt gets in any of the moving suspension parts. Use compressed air, a soft paintbrush, or toothbrush to remove dust or dirt. Avoid using solvents or chemicals as they can actually wash dirt into the bearings or moving parts as well as cause damage to the electronics.

Rebuilding the Differential

The gears in the differential will wear over time. The same is true for the outdrives, driveshafts, and rear axles. We suggest using a small rag or paper towel to lay out the parts you remove to make it easier to reassemble.

Disassembly

1. Unplug the motor.
2. Remove the gear cover (three screws).
3. Remove the two screws at the extreme rear bottom of the chassis.
4. Remove the screw attaching the rear shock tower to the transmission and the four screws at the bottom of the chassis holding the gearbox in place and slide it out of the chassis
5. Remove the left side of the gearbox by removing the three screws.
6. Remove any shims on the bevel gears and set them aside so they can be reinstalled in the same location.
7. Carefully remove the large plastic sun gear and the bevel gears on either side of it. You can use the removed differential assembly as a guide for putting together the replacement unit (a little Team Losi Teflon grease #LOSA3066 can be applied for even better performance).
8. Remove the center mounted idler gear from the gearbox. Remove the shaft and push out the ball bearings from either side. Install these bearings in the new gear.

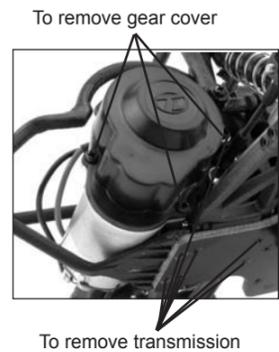

Reassembly

Replace the idler gear and shaft into the center of the same right side of the gearbox. Replace any shims removed from the right bevel gear and slide it through the lower bearing. Replace any shims that came off of the left side bevel gear and allow it to slide through the lower bearing as you put the left gear box half back into position. Replace the screws and reinstall the rebuilt gearbox using the steps in reverse order that were used to remove it.

Changing the Spur Gear

Remove the gear cover by removing the three small screws. If you are replacing the spur gear with one of a different size (number of teeth), you must first loosen (do not remove) the two screws that secure the motor and slide it back slightly. Remove the 3mm nut at the end of the slipper shaft and all of the slipper parts on the outside of the spur gear as well as the old gear. Place the new spur gear into position and replace the slipper parts. If you have changed the size of the spur, see Setting the Gear Mesh below. After you have changed the spur gear, you will have to adjust the slipper as described elsewhere.


Changing the Pinion Gear/Gear Ratio

Before you change the pinion gear ask yourself why you are doing it. In general, if you change to a larger pinion the top speed will improve but you will see less acceleration and run time. This would only be advisable for really long track layouts with few tight turns. Changing to a smaller pinion will give you quicker acceleration and possibly a bit longer run time but a little less top speed. This would be good for short layouts or when running hotter motors. The pinion on the Mini-Slider offers the best balance of both. To change the pinion, remove the gear cover, loosen the motor screws, and slide the motor back. Use a pair of small needle-nose pliers between the motor plate and back of the pinion to push the pinion off. Place the new pinion on the end of the motor shaft and, using the flat of the pliers or a similar flat tool, push it on to the same position as the one removed. See Setting the Gear Mesh below.

Warning: When running aftermarket motors, check with the motor manufacturer for correct gearing. Never over-gear the motor as it can cause overheating, damaging it and the speed control.

Setting the Gear Mesh

The motor screws should be slightly loose. Slide the motor forward allowing the pinion gear to mesh with the spur gear. Snug (not tight) the bottom motor screw and try rocking the spur back and forth. There is a slight bit of movement before the motor is forced to turn over. If not, pull the top of the motor back slightly and recheck. If there is too much slop between the gears, push the top of the motor forward. When set properly the wheels can be spun forward freely with very little noise. Make sure to tighten both motor screws and replace the gear cover before running.

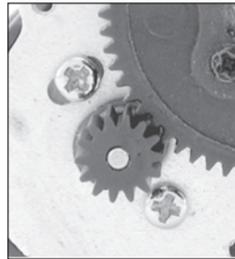

Steering Servo Installation/Removal

Unplug the servo lead from the receiver. Remove the four small screws that secure the servo mount/chassis brace to the chassis. Use a screwdriver or small pliers to pop the steering link off of the servo, so it can be removed. There is no need to remove the servo mounts on either side as all service can be done with them on. Replace in the reverse sequence used to remove it.




Servo Removal
Remove these 4 screws

Receiver/Speed Control (ESC) Installation/Removal


Unplug the power lead, motor leads and steering servo. Do not attempt to open the receiver or electronic speed control (ESC) as only a factory technician has the proper tools and parts to make any repairs necessary. The receiver and ESC are mounted with double-sided foam tape. Use your thumb and index finger at the bottom of the front corners to pull them from the mount. If this is difficult, ask for help. If necessary, carefully use a large flat blade screwdriver between the unit and the mount to pry it loose. Make sure you remove any left over foam or adhesive before remounting with common servo tape or hobby type foam tape.

Rebuilding/Refilling the Shocks

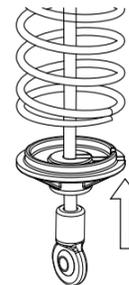

Step 1

After removing the shock, push up on the lower spring cup and remove it from the shaft. Remove the spring and preload spacers.

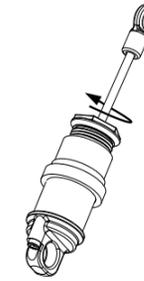

Step 2

Turn the shock upside down and remove the black shock cartridge/shaft assembly from the shock body by turning it counterclockwise.

Note: If you only wish to change or fill the shock fluid, skip to step 5.



Step 3

Remove the top E-clip from the shock shaft. Remove the shock piston. Remove second E-clip. Remove the old cartridge.

Put a drop of oil on the shock shaft before installing a new shock cartridge.



Step 4

Reinstall the lower E-clip. Slide the shock piston onto the shock shaft against the E-clip. Reinstall the top E-clip.



Step 5


If you plan on completely changing the shock fluid (suggested), dump out the old fluid from the shock body. Carefully fill the shock body with fluid to the bottom of the threads inside the shock body.

Note: Your Mini-Slider comes with 100wt shock fluid from the factory.




Step 6

Pull the shaft out so the piston is next to the cartridge and reinstall the assembly into the shock body, turn in a clockwise direction until snug—DO NOT TIGHTEN yet!

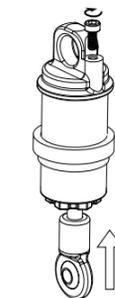

Step 7

Turn the shock over and use a #0 Phillips screwdriver to remove the small bleed screw at the top of the shock. Slowly push the shock shaft up until it stops. Excess fluid should flow out of the bleed hole. Slowly pull the shock shaft halfway back and replace the bleed screw. Use pliers to tighten the cartridge, being careful not to strip the plastic lobes on the cartridge.

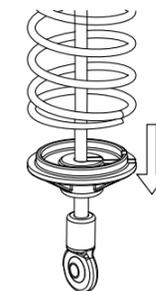

Step 8

Replace the spring and spring cup and test the shock action for smoothness and leaks. Retighten the bleed screw or cartridge if either leaks. Remount the shock on your truck.

**** Production shock parts may differ from those shown in above drawings.**

LOSI DSM Radio System

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This product contains a radio transmitter with wireless technology which has been tested and found to be compliant with the applicable regulations governing a radio transmitter in the 2.400 GHz to 2.4835 GHz frequency range.

The following countries associated regulatory agencies recognizing the noted certifications for this product as authorized for sale and use are:

USA - Belgium - Canada - Denmark - Finland - France - Germany - Italy - Netherlands - Spain - Sweden - UK